



How to make use of Joint Nails **BALSIMPORT**

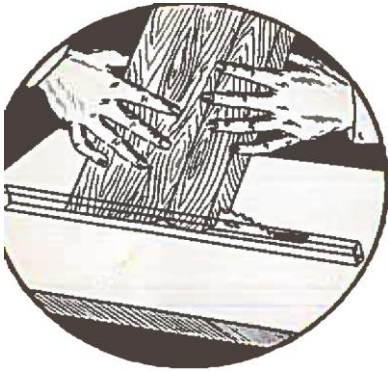

1. A kerf or groove is cut across the face of the miter. The kerf should be 1,4 mm for soft woods and chip boards and 1,6 – 1,8mm for harder woods.

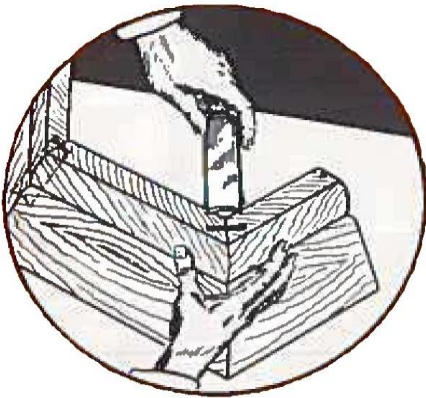


2. Hold the wood joint together and insert the Cap Nail or the U-Nail into the kerf.




U-Nails



CAP Nails

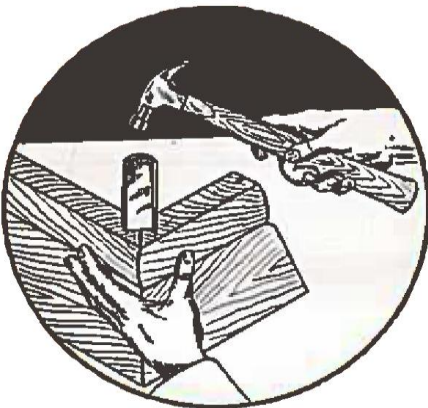

3. The parts are assembled with a hammer or a pneumatic nail gun (contact us). All the panels of one side should be assembled first, then turned over to assemble the other side.

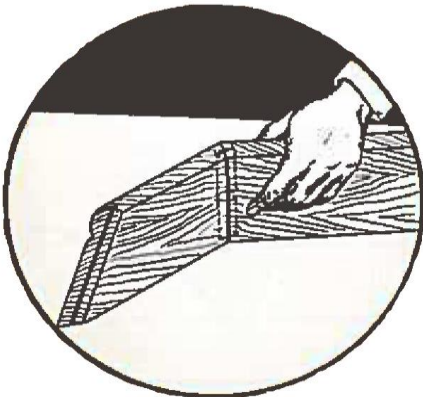

4. Once all the different panels have been joined together, the assembly work is complete and should require no further adjustment. The finished object is very solid and ready immediately for any finishing (varnish or paint).